

Mode C - if you've got it, squawk it

Squawk Codes

7045
Belfast, Aldergrave

2677
Leeds Bradford

7366
Manchester

0010
Birmingham

0011
Southampton, Bournemouth

6170
Doncaster Sheffield

4572
East Midlands

0013
Luton, Stansted


0012
Gatwick, London City

4572
Farnborough

Listening Squawks



Free from
FLYER
www.flyer.co.uk

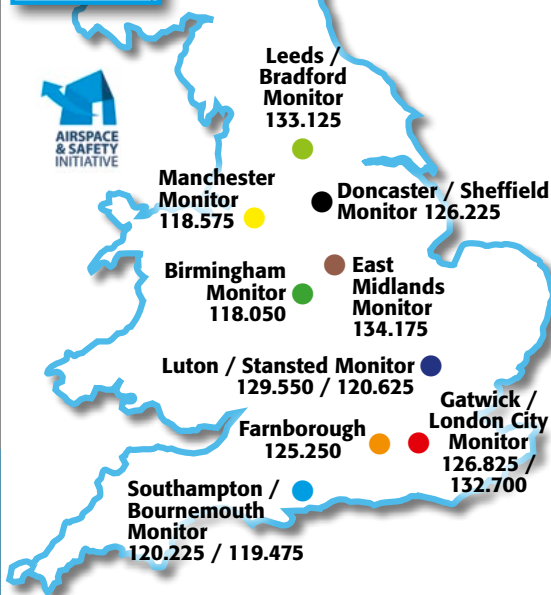

AIS Info line 0500 354802/020 8750 3939 www.ais.org.uk

Listening Squawks

Frequency Monitoring SSR Codes (also known as Squawk Codes) are in use for aircraft flying in the vicinity of: Belfast Aldergrove; Leeds Bradford; Doncaster Sheffield; Manchester; East Midlands; Birmingham; Farnborough; Luton and Stansted; Gatwick and London City; Southampton and Bournemouth. For details of the correct squawk and frequency see over. Further details are available at AIP ENR 1.6.2.5 SSR Operating Procedures – Monitoring Codes. For latest updates see www.flyontrack.co.uk

Points to remember

- Enter the appropriate listening squawk for the area, with Mode C if you have it
- Tune into the appropriate frequency and listen out, without transmitting
- Change back to 7000, with Mode C, if you have it, when leaving the area or changing frequency

A listening squawk does NOT...

Clear you into controlled airspace

Mean that you are receiving any ATC service

If you need a service from ATC, contact either the appropriate LARS frequency or London/Scottish Information as required